

01 Contents





This manual will explain the basic installation and operation of DXRACER® R Series Chair. Link for videos online: http://www.youtube.com/DXRacerEurope

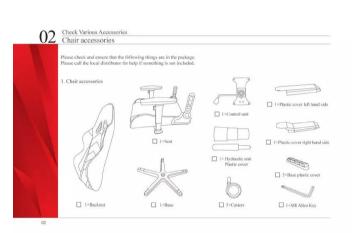

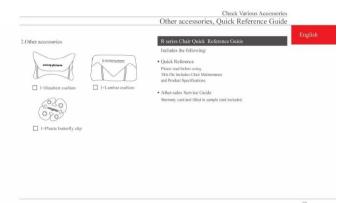

0.

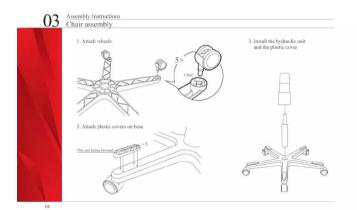

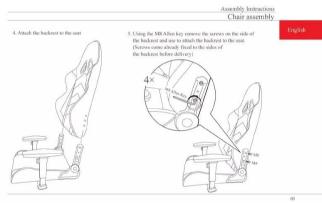

Assembly Instructions
Chair assembly


8. Insert the hydraulic unit into the opening of the control unit


Chair assembly the control unit


Chair assembly Instructions
Chair assembly

English

....

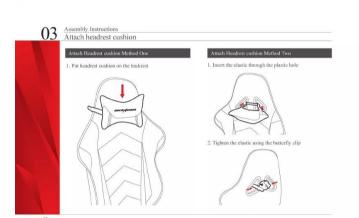

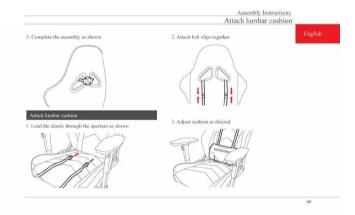

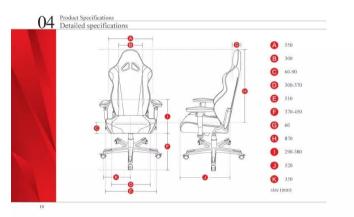

Instructions during use

1.Please move the product gently to avoid collision;
2.Please keep out of direct smulight;
3.Please seep out of direct smulight;
4.Please which your fingers when adjusting the backrest angle;
5.Please much be enterior of gravity is on the hydraulic unit during use;
4.Please watch your fingers when adjusting the backrest angle;
5.Please toggle the headle under your sear when adjusting the backrest angle;
6.Please fill the lever gently to raise or lower the height of the chair. Do not pull it roughly;
7.Do not place any heavy objects on the chair or amressle;
8.Plastic parts with split if chair is exposed to direct smulight;
9.Please do not use abrasive cleaners on the chair.
10. We recommend you use Pledge to clean the chair.

**

Further instructions Instructions during use